

THE AMAZING CARD

How to use The Amazing Camera



Please first carefully read the 'Operating Instructions' in your SONY DSC-U60 handbook.

- 1) Ensure that BOTH cameras are in the 'Camera' mode.
- 2) Push the POWER ON button (right camera). Both cameras will now power up.
- 3) Compose your image using the 2 LCD displays.
- 4) If you require flash change the flash options on BOTH cameras. See your SONY handbook.
- 5) Push the white button on top of the RIGHT camera half to focus. From the moment that the two green points at the top in the LCD are not blinking, push the button further. (see page 22)
- 6) Check the image that you have just taken using the LCD displays. If you are unhappy with the result take the shot again. NEVER ERASE an image after you have taken it.
- 7) After shooting your images(s) push the POWER OFF.

To ensure good 3D results, please read the following:

- a) Remember that the cameras will take a horizontal image when correctly held upright. (see large image).
- b) Please allow a minimum of 2 metres between the front of the cameras and the subject.
- c) If your subject moves or if you are unhappy with the composition of the image, take more images. (we suggest another 3 or 4)
- d) If you do not need flash, just set the flash modes on BOTH cameras to 'no flash'.
- e) If you decide to use any of the special features of these SONY U60 cameras, please remember to set these options on BOTH cameras.
- f) If an 'empty' battery blinks on the LCD, STOP shooting and replace ALL 4 batteries.
- g) If you want to use our custom Amazing Card layout, a vertical image is required. Remember to turn your cameras through 90 degrees before taken this image.
- h) ALWAYS select the images size 2.0Mb, not VGA, on the cameras.
- i) Don't worry if your first attempts are not succesful. Practice makes perfect.

